
Sofabed.co.uk


SOFABED ASSEMBLY INSTRUCTIONS

- 1.1 Your sofabed will be delivered in 5 sections (plus loose seat cushions)
- a) Left Arm (as you look at the sofabed)
- b) Right Arm (as you look at the sofabed)
- c) Rear Panel
- d) Bottom Section
- e) Sofabed action
- 1.2 Place all the items in your room of choice and remove all packaging
- 1.3 Before starting assembly check that all parts are in good condition
- 1.4 You will need a large Phillips screwdriver and adjustable spanner to assemble the sofabed. Some parts are heavy. This assembly requires 2 people

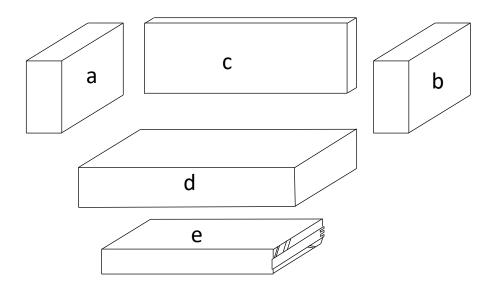


STEP 2

- 2.1 The sofabed is supplied with 4 bolts in the left arm and 4 bolts in the right arm
- 2.2 Remove these bolts with a screwdriver and place in a safe place

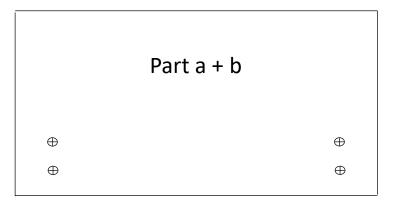


STEP 3

- 3.1 The sofabed is supplied with 4 bolts in the rear panel
- 3.2 Remove these bolts with a screwdriver and place in a safe place

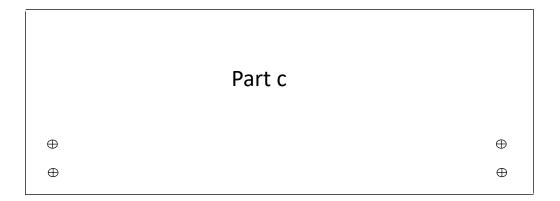


4.1 The sofabed base is supplied with 2 attaching bolts in each end.Do not remove these bolts they are for attaching the sofabed.4.2 You will note that there are 4 holes in the rear and 4 holes on each side that align with the holes on the arms and rear panels

Drawing shows inside of the Bottom Section(d)

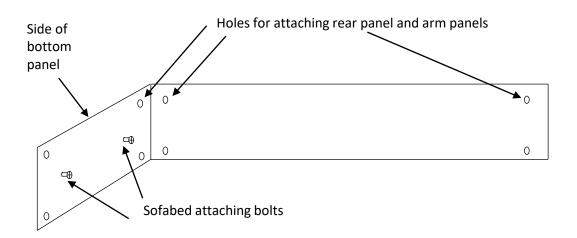


STEP 5

- 5.1 Place part c (the rear of the sofabed) on the floor face up
- 5.2 Place part d (the bottom of the sofabed) atop this so the screw holes align
- 5.3 Attach the two parts using the bolts that were previously removed. Finger tighten until all bolts are in place then tighten with a screwdriver

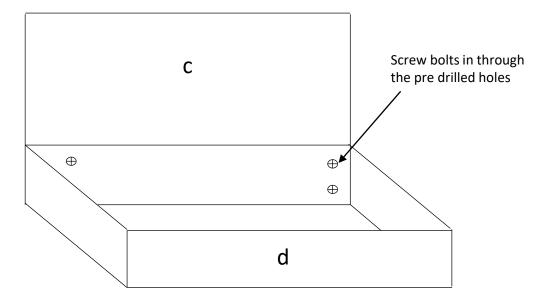


- 6.1 Keep the back of the sofabed flat to the ground. Align the left hand arm (part a) so that the holes in the base align with those in the arm
- 6.2 Attach the arm using the bolts that were removed in step 2
- 6.3 Repeat this process for the right hand arm (part b)

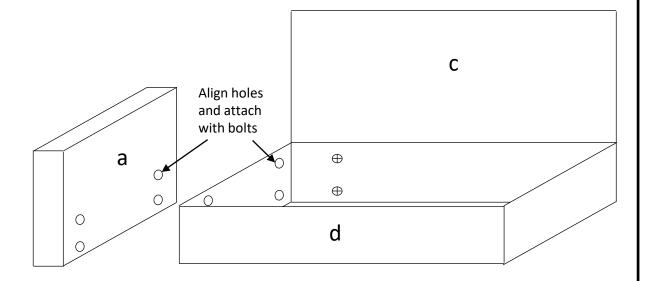


STEP 7


- 7.1 The next step is to fit the sofabed action which is completed from the bottom of the sofabed
- 7.2 The sofabed action is supplied "tied up" with yellow wire. Do not remove this wire until the action has been fitted
- 7.3 The sofabed action has a small silver handle and some labels on the bar. This is the top of the sofabed action
- 7.4 Leave the sofabed resting on its back and approach the sofabed from underneath. The action will be fitted though the bottom of the sofabed
- 7.5 The end of the sofabed action has a metal bar on each end as shown below. This has 2 fixing points "f" and "g"

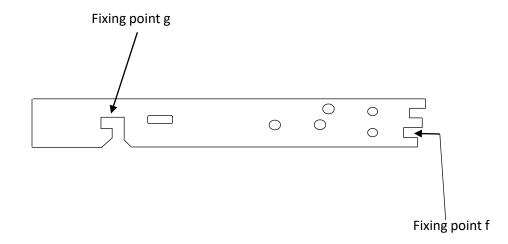


- 8.1 Take the sofabed action and push through the underside of the sofabed so that it goes past the fixing bolts (Drawing 1)
- 8.2 Align Fixing point f on the bar on the end of the sofabed action to fixing point 1 in the base on both sides (Drawing 2)
- 8.2 Rock the sofabed action so that Fixing Point 2 on the base on the base slots into fixing point g (Drawing 2)
- 8.3 Until the yellow wire keeping the sofabed action together. Please note that the sofabed action may spring open
- 8.4 Tighten the 4 fixing bolts
- 8.5 Stand the sofabed on its feet
- 8.6 The sofabed is ready to use. Please consult the sofabed usage instruction for how to use the sofabed https://sofabed.co.uk/Sofabed-How-It-Works.pdf

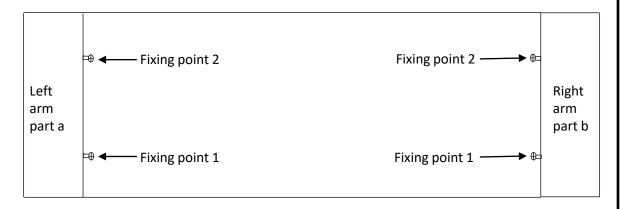

View from underneath of the sofabed lying on its back

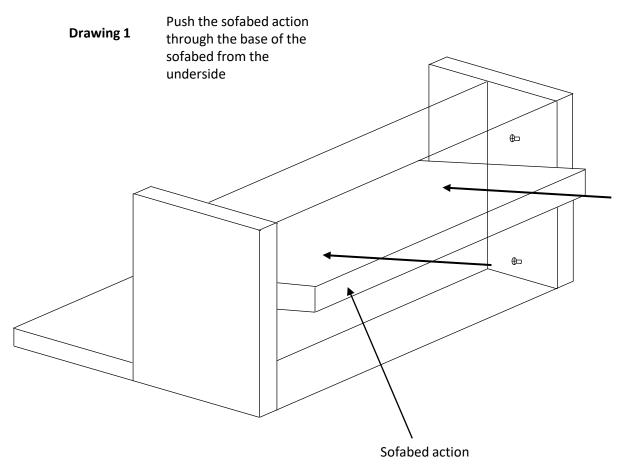

Drawing 2

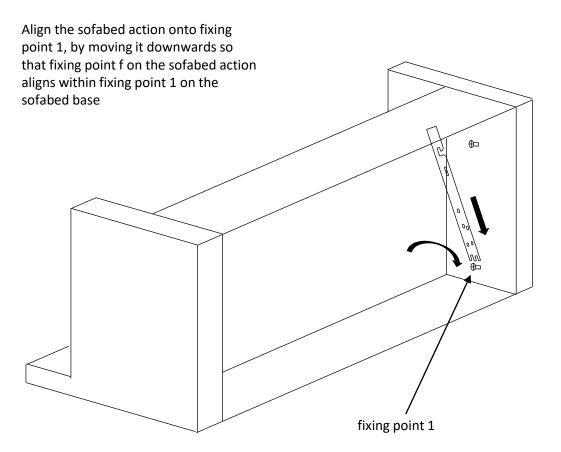

Drawing 3

Rock the sofabed action back until the bolt in the arm aligns with the cut out in the sofabed action (fixing point g)

